



# Chemical Consultants INCORPORATED

**SMP®**

**Emulsion Remover Crystals**

## GENERAL DESCRIPTION

SMP® is designed for removal of all photo polymer, diazo, and capillary film emulsions. SMP® will immediately liquify and break down the emulsion. Dramatically increase the speed of the reclaim procedure.

## ADVANTAGES

- Economical
- Easy to use
- Immediately breaks down emulsion
- No Odor
- Safe on all types of mesh
- Non-Hazardous (After Dilution)
- Biodegradable / Drain Safe
- Concentrated

## Application

Using a plastic container, dissolve 1½ oz. (by weight) into 1 gallon of water. Dilution ratio may be increased for a stronger solution.

SMP® can be applied by a sponge, pad, spray bottle, dip tank, or pneumatic pump systems.


### Quick Tip:

Use a dilution that has plenty strength to break down the emulsion.

Emulsions, that are not properly broken down, will leave excessive residue on the mesh.



**Step 1.** After removal of ink, block-out, and tape, apply SMP® solution to a wet screen(both sides).

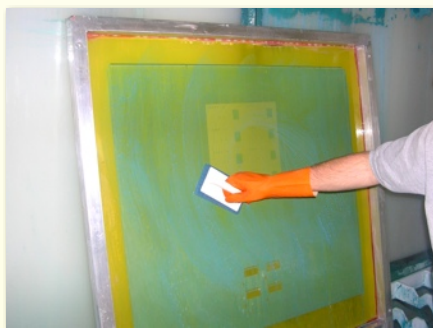

**Step 2.** Scrub screen with non-abrasive pad or brush.



**Step 3.** High pressure rinse - starting at bottom.

## Packaging

1 lb. jar

2 lb. jar

50 lb. keg